
Heater (LPG)

- 1. Put the heater with holder (1) to dashboard in such a way that after shutting the door, lower glass is not hitting heater valve. Then mark assembly holes on OHG.
- 2. Drill Ø11 holes and put M8 rivet nuts. Attach the heater using M8x20 screws (2).



- 3. Attach hoses to heater outlet/inlet and tight them up using clamps.
- 4. Plug in electric harness


- 5. Take floor panel off and cut off 40 x 40 mm square in the corner (3) 6. Run hoses through the hole (3).

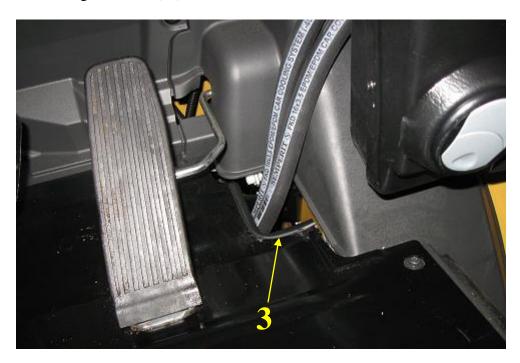

7. Cut hoses (4) and (5) into 2 pieces. Attach heater inlet hose to cut hose no (4) and heater outlet hose to cut hose no (5).





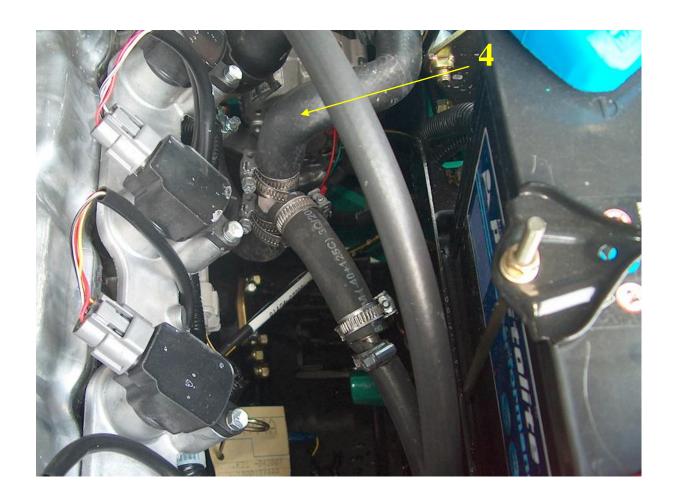


Heater (diesel)

- See point 1. Heater LPG
 See point 2. Heater LPG



- 3. See point 3. Heater LPG
- 4. See point 4. Heater LPG

- 5. See point 5. Heater LPG6. See point 6. Heater LPG

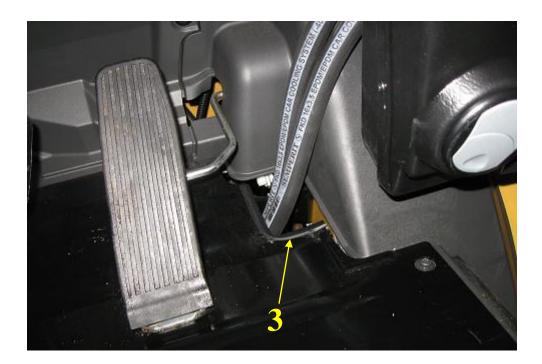

7. Attach heater inlet hose to engine outlet (4)





6. Attach heater outlet hose to engine inlet (5)



